

# DM18



## Features

### Photo

- JPEG
- Photo transitions – 13 kinds
- Customizable display duration
- Slide show display with background MP3 audio

### Audio

- MP3 format
- Play / stop / pause
- Volume adjustment and mute function
- Graphic audio equalizer

### Movie

- MPEG1
- MPEG2 (Compact Flash card only)

### Video

NTSC/PAL video coding

### Video Screen

18" Active Matrix Color TFT LCD

### Input

- Composite Video/Audio

### Technical Specifications

- Power: DC 12V
- Current: 550 mA
- Power Consumption: 65 W
- Screen Specs
  - Size: 359.0 mm x 284.2 mm
  - Resolution: 1280 x 1024
  - Lamp Lifetime: 50,000 hours
  - Brightness: 250cd/m<sup>2</sup>
  - Contrast Ratio: 550:1
  - View Angle: 170°vertical; 170°horizontal
- File Format: JPEG, MPG, MP3
- Memory Card: MS, MS PRO, SD, MMC, SM, CF

**WARNING** - Improper insertion of a Compact Flash card will damage the pins inside the card reader!

Compact Flash cards have grooves on opposite sides of the card - one thick and one thin. Make sure the card is oriented the correct way when inserting.



Also, be sure to insert the card "long" side first.

## Operation

Plug in the 12V DC transformer. Start the unit by using the power button on the remote or the power button on the top of the unit. If no picture appears, use the mode button to cycle through the available input sources.

### Password

A 4-digit password is required for operations. The factory password is "1111" and we suggest that you DO NOT change the password unless absolutely necessary. **If you forget your password, there is no way to recover or reset it** Pressing any button on the remote will prompt the unit to ask you for the password. the prompt is in black text in the upper middle of the screen, so it may be difficult to see the password prompt when displaying a dark image. Entering Password: A correct entry will signal PASSWORD OK, and a wrong entry will signal ERROR PASSWORD. The password will expire after three minutes.

### Setup


Open the setup menu using the SETUP button on the remote. Navigate the menu using the up/down/right/left arrows and the ENTER button.

### Basic Setup

Check the following settings to make sure the unit is set up to play automatically.

1. Under PHOTO SETUP turn THUMBNAIL DIGEST to OFF
2. Under SLIDESHOW SETUP set AUTO START to ON

### Volume

Press MENU on the remote to bring up the On Screen Display. Enter password if necessary. Use the right arrow button to move to the  icon. Press the down arrow and select the VOLUME. Then use the left/right arrow buttons to adjust the volume.

### Preferences

Remove all media cards to enter the PREFERENCES part of the setup menu.

### Timer

Press TIMER on the remote to access the two timer controls. Enter password if necessary. The on/off times are matched by color. Timer 1 is yellow, timer 2 is purple. Enter the time in 24-hour format.

**800-354-2102**

PO Box 68  
20 Gose Pike  
Danville, Kentucky 40423-0068  
(859)236-7600, Fax(859)236-9050  
mail@admart.com  
www.admart.com

**AdMart**  
CUSTOM SIGNAGE