

DM8



Features

Photo

- JPEG
- Photo rotation 90, image zoom and thumbnail browsing
- Photo transitions – 13 kinds
- Customizable display duration
- Slide show display with background MP3/WMA audio
- On-screen display of filename, file size, resolution and display time.

Audio

- MP3 and WMA format
- Play / stop / pause
- Volume adjustment and mute function
- Graphic audio equalizer

Movie

- MPEG1
- MPEG2

Video

NTSC/PAL video coding

Video Screen

8" Active Matrix Color TFT LCD

Memory Cards

Compact Flash cards supported

Operation

Operation of the unit is controlled through the menu. Open the menu using the Menu button on the remote or control panel.

If no picture appears, push the TV/AV/PC button on the remote or control panel to cycle through the different available input sources.

NOTE: Using the power buttons on the remote or control panel turns off the video screen only. The unit will continue to play until it is unplugged.

Volume

To adjust the volume using the remote control, press the left or right buttons.

IMPORTANT - When recording content to a memory card for playback on DM8, a folder must first be created and named "Loop" - all play files must be placed within this folder.

WARNINGS - Unplug unit BEFORE inserting or removing a memory card or USB device! Failure to do so may result in damage to the card and/or DM8 unit.

Improper insertion of a Compact Flash card will damage the pins inside the card reader!

Compact Flash cards have grooves on opposite sides of the card - one thick and one thin. Make sure the card is oriented the correct way when inserting.



Also, be sure to insert the card "long" side first.

